


CSP 3816

CSP 4518

UT 74123-D

UT 74125-D

STARTER – IGNITION

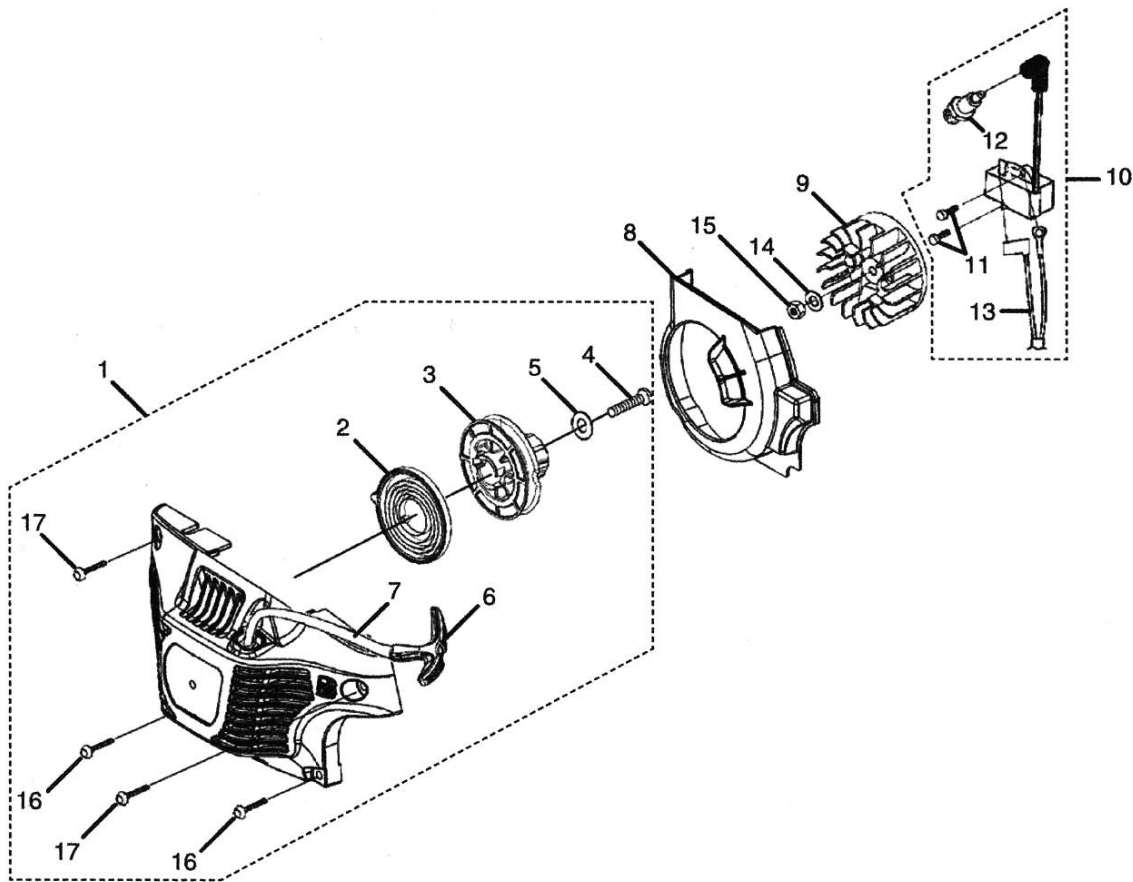


CSP 3816

CSP 4518

UT 74123-D


UT 74125-D

ENGINE INTERNAL - OIL PUMP

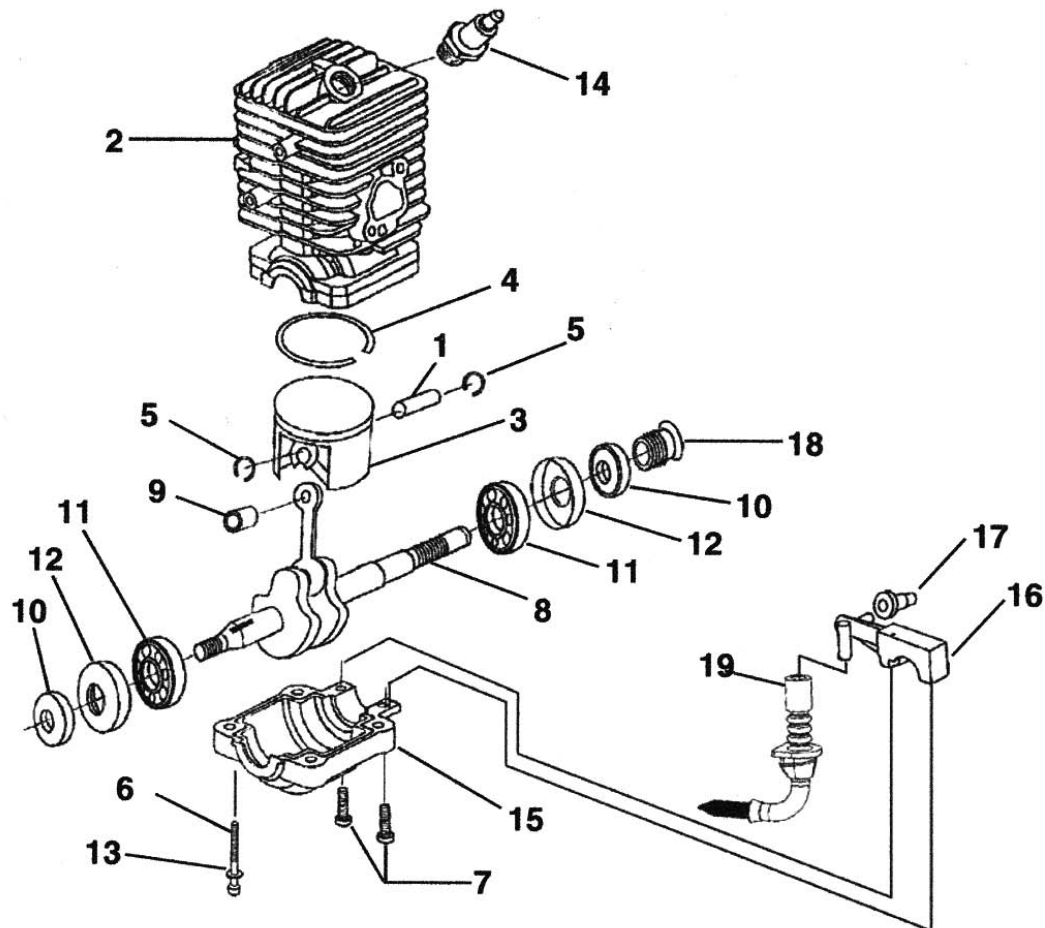

Homelite®

CARBURETOR – AIR FILTER

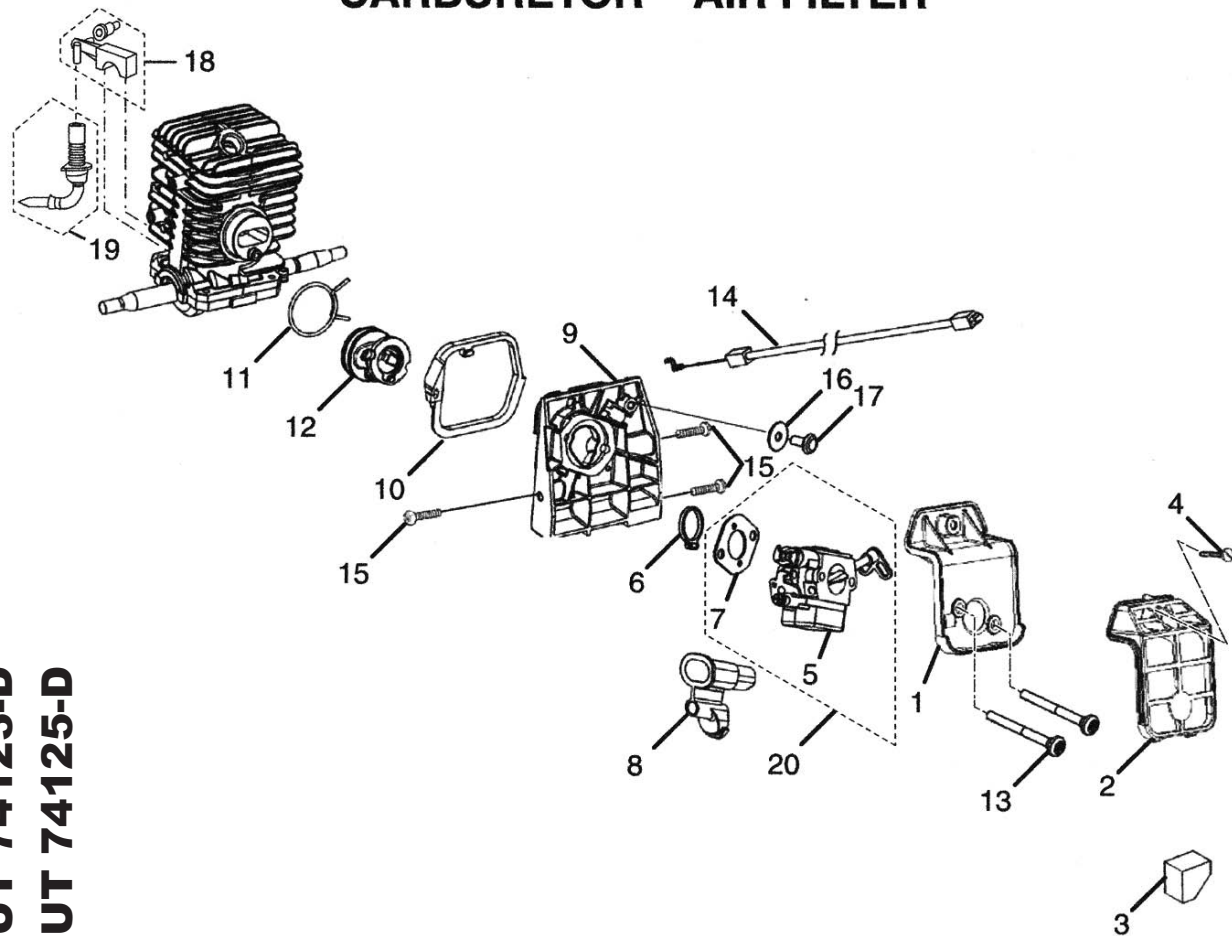

CSP 3816

CSP 4518

UT 74123-D


UT 74125-D

CSP 3816
CSP 4518


UT 74123-D
UT 74125-D

Homelite®

MUFFLER

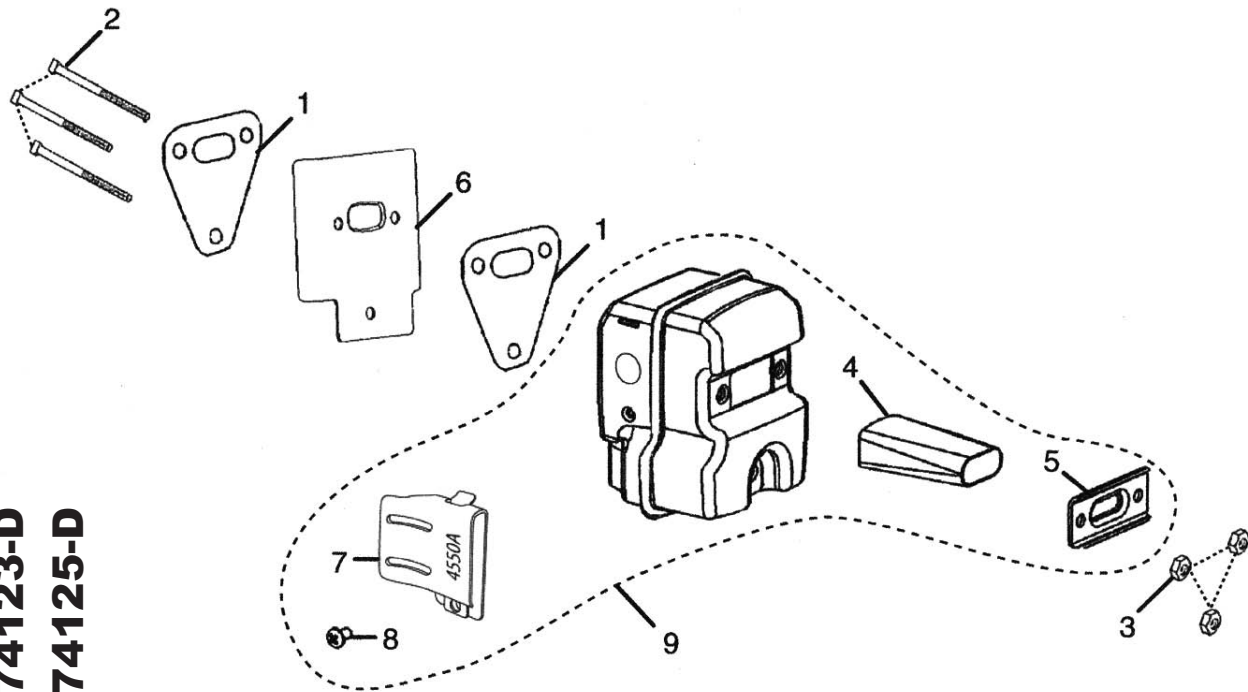

ENGINE HOUSING – FUEL TANK – OIL TANK

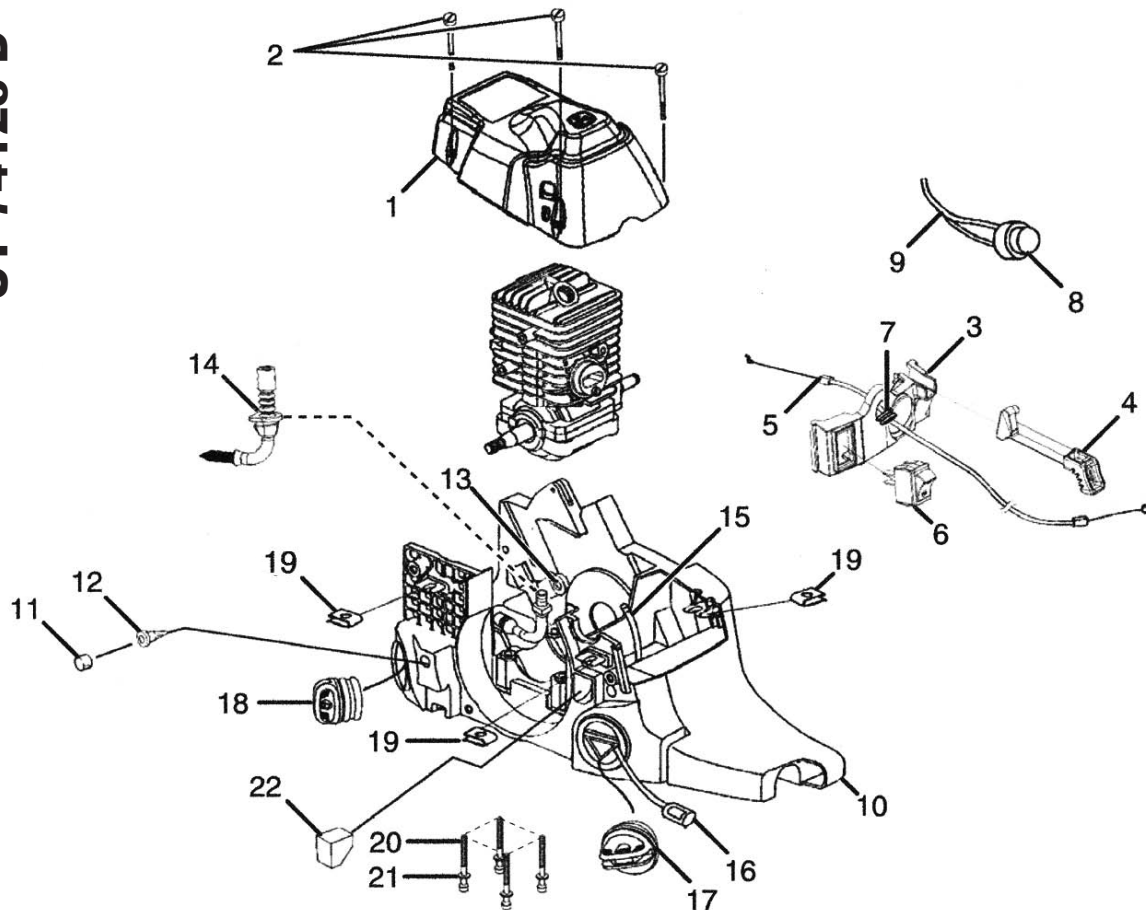

Homelite®


CSP 3816

CSP 4518

UT 74123-D

UT 74125-D

CLUTCH – CHAIN BRAKE – DRIVE CASE COVER

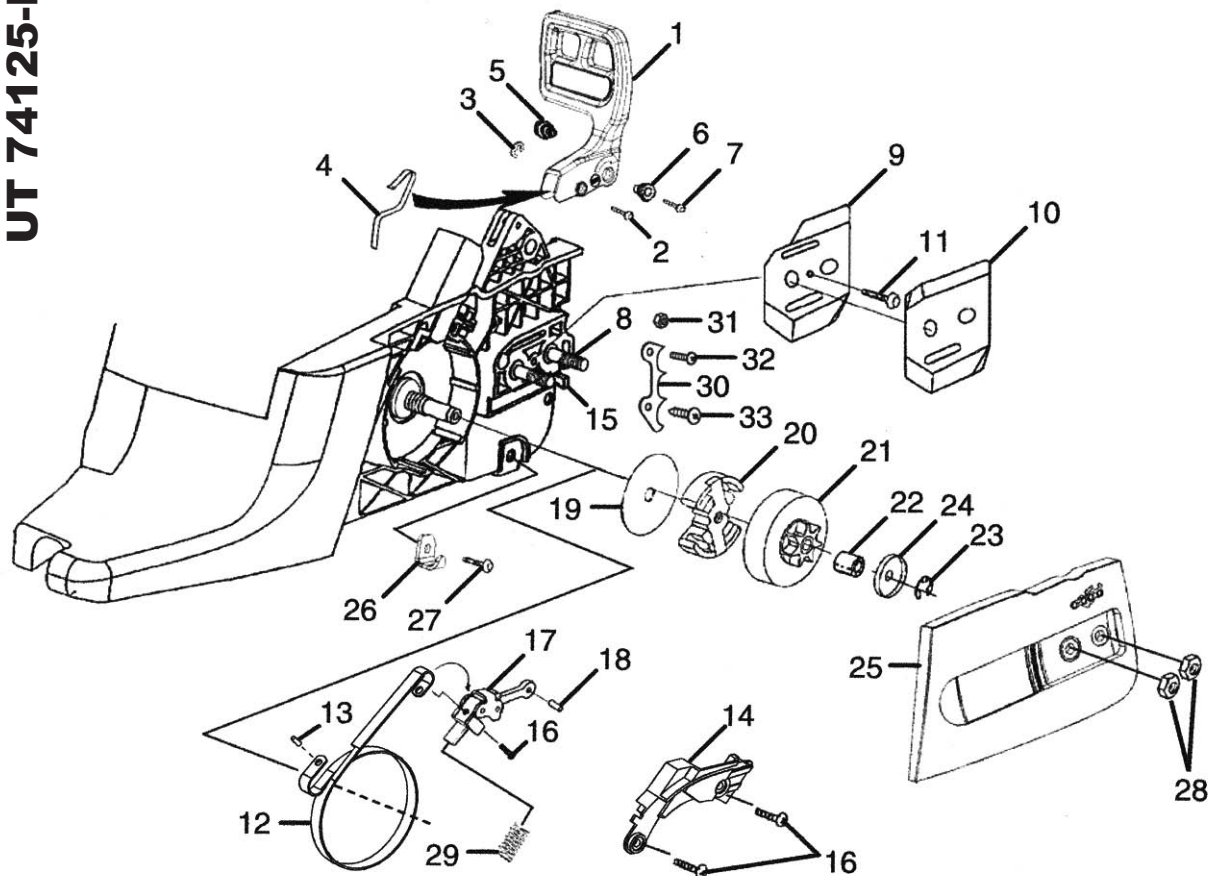

Homelite®


CSP 3816

CSP 4518

UT 74123-D

UT 74125-D

HANDLES

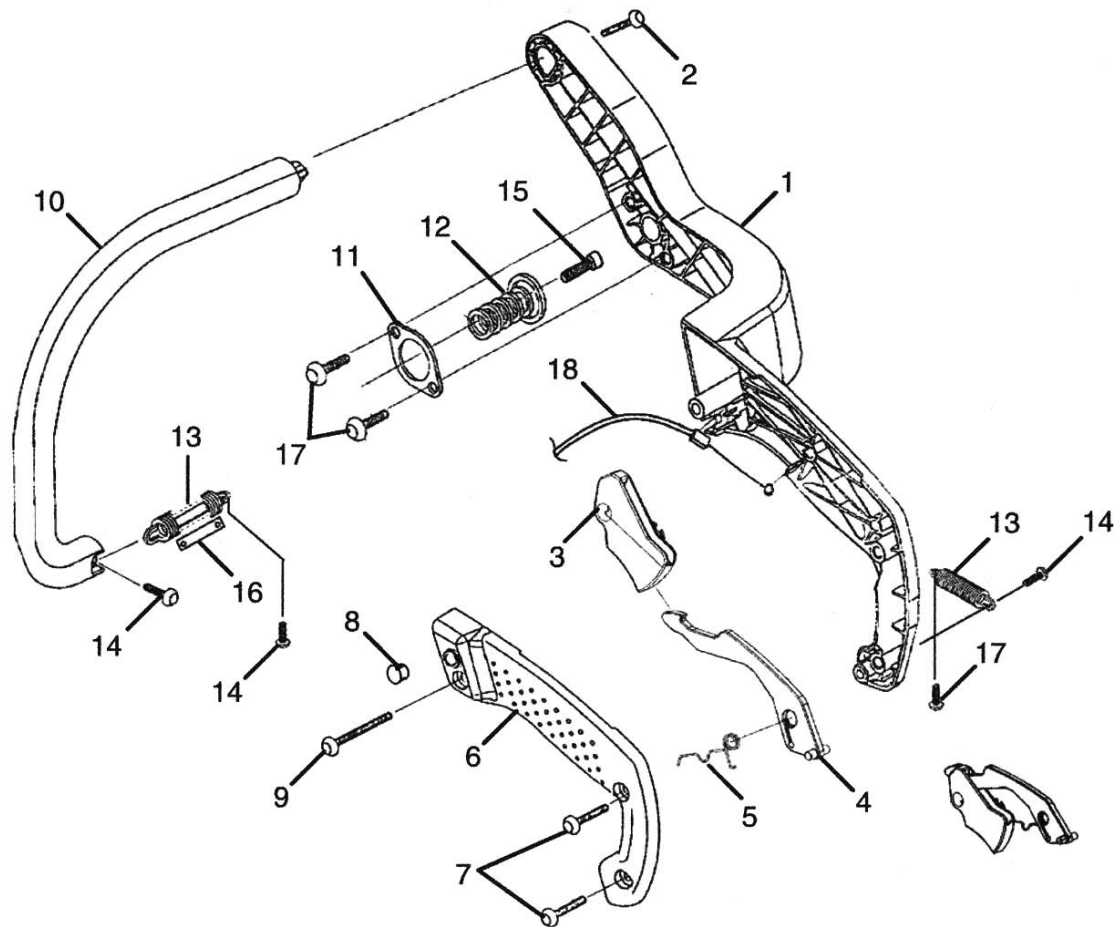

CSP 3816		CHAIN SAW		UT 74123-D
CSP 4518		CHAIN SAW		UT 73125-D
starter - ignition				
Position	Article-no	Superseded by	Description	Qty
1	984687001		STARTER COVER ASSY., W/EYELET	1
2	PA01330		SPRING & CONTAINER	1
3	PS03882		PULLEY, STARTER	1
4	82621	UP04237	SCREW (10-14 X 5/8 IN.)	1
5	94062	UP04089	WASHER	1
6	PS06114	PS06114	GRIP, STARTER	1
7	9789901	UP03911	ROPE, STARTER (46 IN.)	1
8	PS03984		BAFFLE	1
9	PA00695	UP05850A	ROTOR W/STARTER PAWL	1
10	984883001		IGNITION KIT	1
11	82575	UP04086	SCREW (8-32 X 5/8 IN.)	2
12	PS06216		SPARK PLUG	1
13	PA01311		IGNITION SWITCH HARNESS	1
14	PS84065	UP04241	WASHER	1
15	81229A	UP04081	NUT	1
16	82620	UP04236	SCREW (10-14 X 7/8 IN.)	2
17	82621	UP04237	SCREW (10-14 X 5/8 IN.)	2
engine internal - oil pump				
Position	Article-no	Superseded by	Description	Qty
1	04923		PISTON PIN	1
2	PS04368		CYLINDER MACH/PLATED	1
3	A09135		PISTON (MACH)	1
4	09082		PISTON RING	1
5	64813	UP04051	RETAINING RING	2
6	82527	UP04083	SCREW TORX PLUS CAP-SOCKET HD	4
7	PS04989		SCREW, (8/32 X 5/8 IN. PAN HD TORX)	2
8	PA00980		SINTERED METAL CRANKSHAFT ASSY.	1
9	PS04921	UP04174	NEEDLE BEARING	1
10	04920	UP04047	SHAFT SEAL	2
11	08838		BALL BEARING	2
12	04919	UP04046	BEARING CASE	2
13	84008	UP04087	FLAT WASHER	4
14	PS06216		SPARK PLUG	1
15	09097	UP04232	CRANKCASE CS	1
16	PA01396	PA01396	OIL PUMP ASSEMBLY	1
17	06841	UP04185	GROMMET, OIL OUTLET	1
18	06847	UP04188	LEFT HAND WORM	1
19	PA01037		OIL INTAKE TUBE W/FILTER	1
carburetor - air filter				
Position	Article-no	Superseded by	Description	Qty
1	PA01284		AIR FILTER BASE	1
2	PS02798		AIR FILTER COVER	1
3	PS05070		PRE FILTER (IN ENGINE HOUSING)	1
4	82617	UP04235	SCREW (8-16 X 5/8 IN.)	1
5	985208001		CARBURETOR	1
6	PS04375		PLATE, CARBURETOR	1

Position	Article-no	Superseded by	Description	Qty
7	PS05105		GASKET, CARBURETOR	1
8	PS04371		GROMMET, CARBURETOR	1
9	PA01057		ADAPTOR, CARBURETOR	1
10	PS04374		SEAL-CARB. ADAPTOR	1
11	PS04309		CLAMP	1
12	PS02794		INTAKE BOOT	1
13	PS04446		SCREW (10-32 X 1.75 MM)	2
14	PS04377		THROTTLE CABLE	1
15	82563	UP03900	SCREW (TORX)	3
16	12789	UP03867	WASHER	1
17	82623	UP04239	SCREW	1
18	PA01396	PA01396	OIL PUMP ASSEMBLY	1
19	PA01037		OIL INTAKE W/FILTER	1
20	984888001		CARBURETOR ASSEMBLY	1
muffler				
Position	Article-no	Superseded by	Description	Qty
1	06839	UP04183	MUFFLER GASKET	2
2	PS04525		SCREW-SQUARE HD.	3
3	81206	UP04059	NUT-LOCKING HEX (10-32)	3
4	PS04350		SCREEN, SPARK	1
5	PS04147		SCREEN RETAINER	1
6	PS06121		MUFFLER PLATE	1
7	PS06075		DEFLECTOR, MUFFLER	1
8	95922	UP04244	SCREW (8-32 X .312 PAN HD.)	1
9	PA01635		MUFFLER ASSEMBLY	1
engine housing - fuel tank - oil tank				
Position	Article-no	Superseded by	Description	Qty
1	984363001		CYLINDER COVER	1
2	07597	UP04219	SCREW (10-16 X 1.5 PAN HD.)	3
3	PS06119		CONTROL PANEL	1
4	PA01644		ROD, CHOKE	1
5	PS04377		THROTTLE CABLE	1
6	PS06163		SWITCH, ROCKER	1
7	07587	UP04215	GROMMET - SPLIT	1
8	PS06164		PRIMER BULB	1
9	07454		RUBBER TUBING (5-1/2 IN.)	1
10	985028001		CHASSIS ASSEMBLY	1
11	N/A		ELEMENT, FILTER	2
12	N/A			2
13	N/A			1
14	PA01037			1
15	07454			1
16	PS03380			1
17	N/A			1
18	N/A			1
X	N/A		GUIDE BAR BOLT (NOT SHOWN)	2
19	07598	UP04221	SPEED NUT	3
20	82527	UP04083	SCREW (10-24 X 2 IN.)	4
21	84008	UP04087	WASHER	4
22	PS05070		PRE FILTER	1
clutch - chain brake - drive case cover				
Position	Article-no	Superseded by	Description	Qty
1	PS04726		HAND GUARD	1
2	07580	07580	HAND GUARD ACTUATING PIN	1

Position	Article-no	Superseded by	Description	Qty
3	69599	UP04056	RETAINING RING	1
4	PS04955		SPRING, HANDGUARD	1
5	07393	UP04202	PIVOT, LH	1
6	07392	UP04201	PIVOT, RH	1
7	82624	UP04240	SCREW (8-32 X 5/8 IN.)	1
8	N/A		GUIDE BAR BOLT [ENGINE HOUSING ... CHASSIS ASSEMBLY ...]	2
9	07404A	UP04206	PLATE, GUIDE BAR	1
10	07405A	UP04085	PLATE, GUIDE BAR	1
11	82513	UP04082	SCREW (6-19 X 1/2 IN.)	1
12	985030001		BRAKE BAND	1
13	06672	UP04181	PIN, ROLL	1
14	985021001		BRAKE BAND COVER	1
15	984901001		ADJUSTING PIN KIT	1
16	82623	UP04239	SCREW (8-16 X .320)	3
17	984897001		CHAIN BRAKE LINK	1
18	95395A	UP04090	PIN, ROLL	1
19	04940	UP04182	THRUST WASHER	1
20	984894001		CLUTCH & HARDWARE	1
21	984640001		SPROKET DRUM (.325 PITCH)	1
22	PS04669		BEARING, NEEDLE	1
23	08981	UP04228	RING, RETAINING	1
24	04939A	UP04179	WASHER	1
25	PA01106		DRIVE CASE COVER	1
26	PS02928		CHAIN CATCHER	1
27	82541	UP03897	SCREW (10-24 X 1/2 IN.)	1
28	81196	UP04058	NUT, HEX	2
29	984679001		SPRING, COMPRESSION	1
30	PS06077		BUMPER SPIKE	1
31	81208	UP03885	LOCK NUT, HEX (10-24)	1
32	82311		SCREW	1
33	82632		SCREW, TRUSS HD.	1

handles

Position	Article-no	Superseded by	Description	Qty
1	06870		REAR HANDLE	1
2	82615	UP04234	SCREW (12-14 X 1-1/2 IN.)	1
3	PS06110		TRIGGER, THROTTLE	1
4	PS06111		THROTTLE LOCK OUT	1
5	PS04914		TORSION SPRING	1
6	06871		HANDLE COVER	1
7	82563	UP03900	SCREW (10-14 X 3/4 IN.)	2
8	PS04932		PLUG-PLASTIC	1
9	82622	UP04238	SCREW (10-14 X 1-3/8 IN.)	1
10	PS03985		FRONT HANDLE KIT	1
11	07384		ISOLATOR PLATE	1
12	PS05199		UPPER ISOLATION SPRING	1
13	PS05217	PS05217	SPRING y ISOLATOR	1
14	82621	UP04237	SCREW (10-14 X 5/8 IN.)	3
15	82597	UP04233	SCREW (10-24 X 5/8 IN.)	1
16	01812A	UP04200	SPRING RETAINER	1
17	82541	UP03897	SCREW (10-14 X 1/2 IN.)	3
18	PS04377		THROTTLE CABLE	1